

Attention! Achtung! ¡Atención!

Zündkerzen nur nach Betriebsanleitung verwenden!


Use only spark plugs acc. to Owner's Manual!

Utiliser les bougies selon Notice d'Entretien!

Sólo emplear bujías según las Instrucciones de Servicio!


DB Teil Nr. 000 584 37 40

Yellow water transfer decal goes on valve cover in one of several locations depending on type of valve cover. Applies to all but late 280SL.

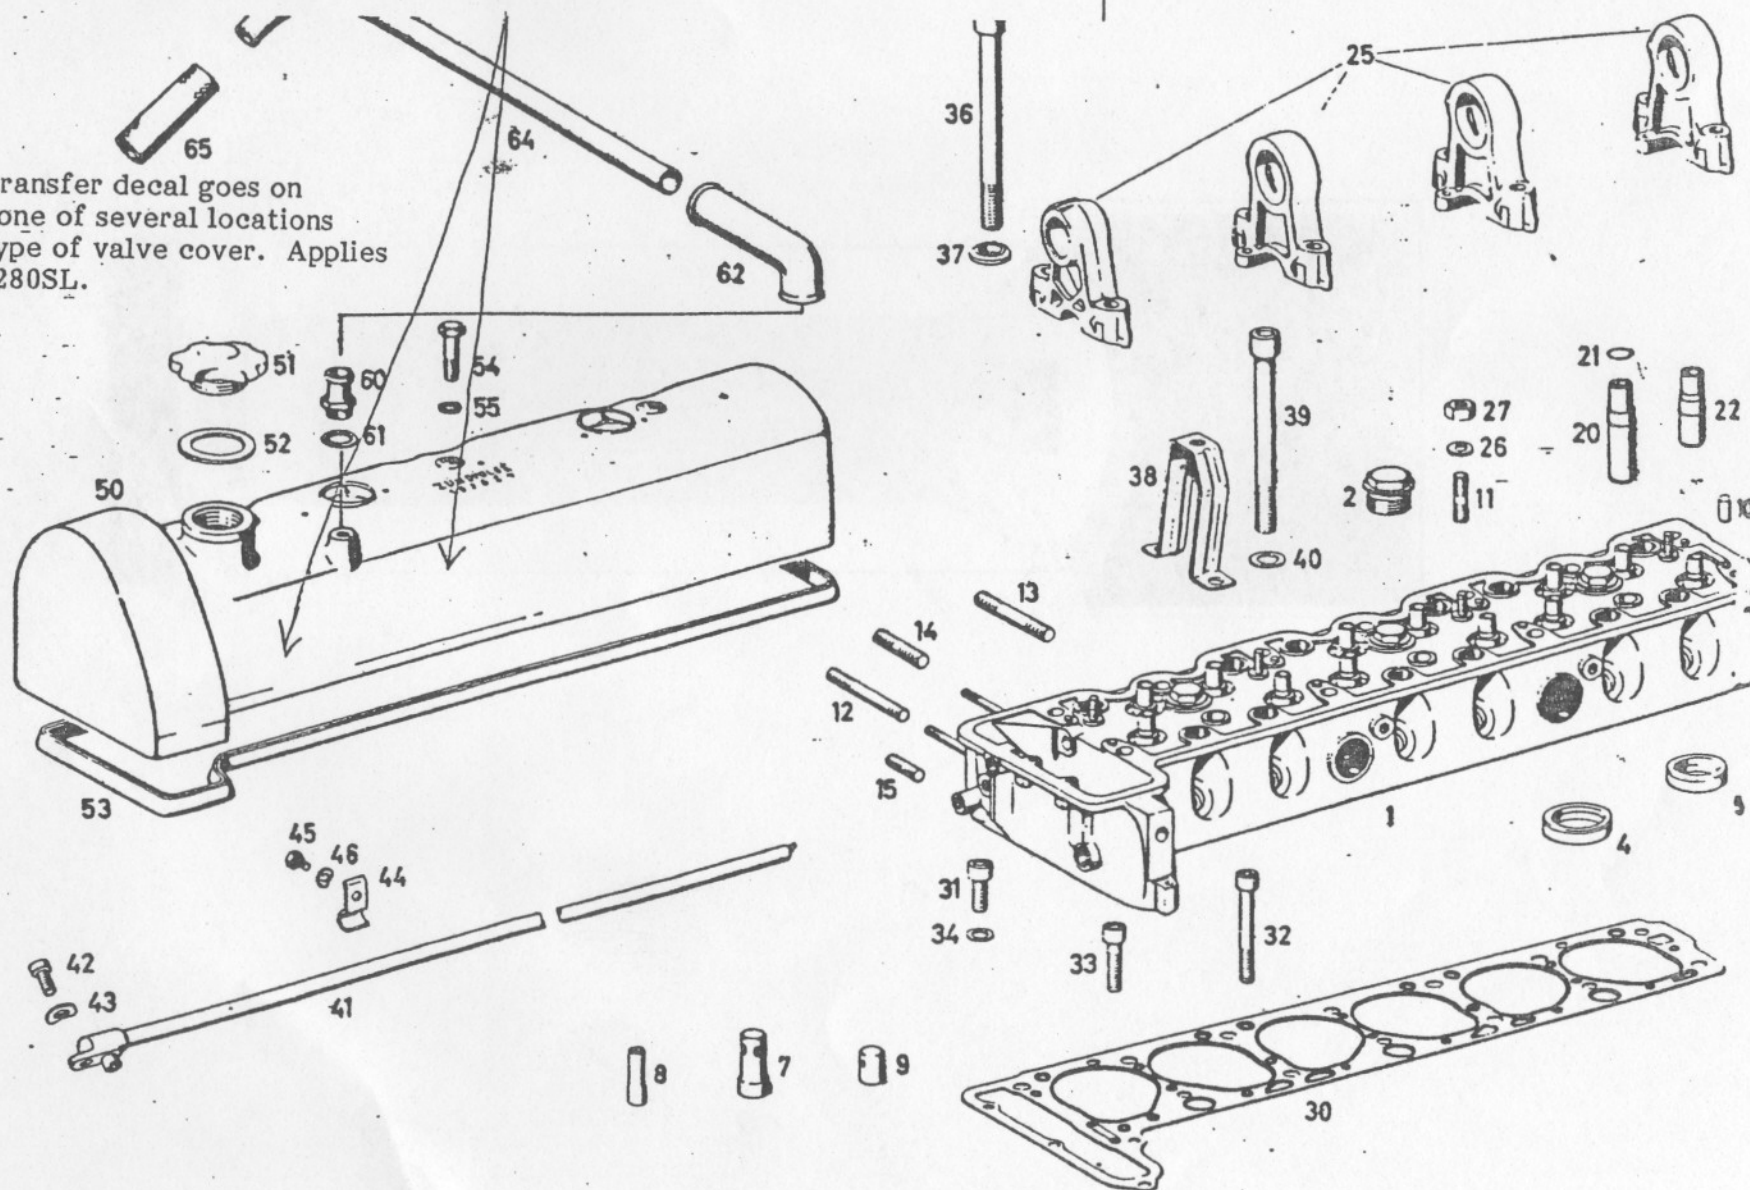


Coil Decal:

Yellow background water transfer type. Goes on black coils above the bracket, below the top rim of the coil. Does not go on Blue coil used on late 280SL. They have a red thunderbolt.

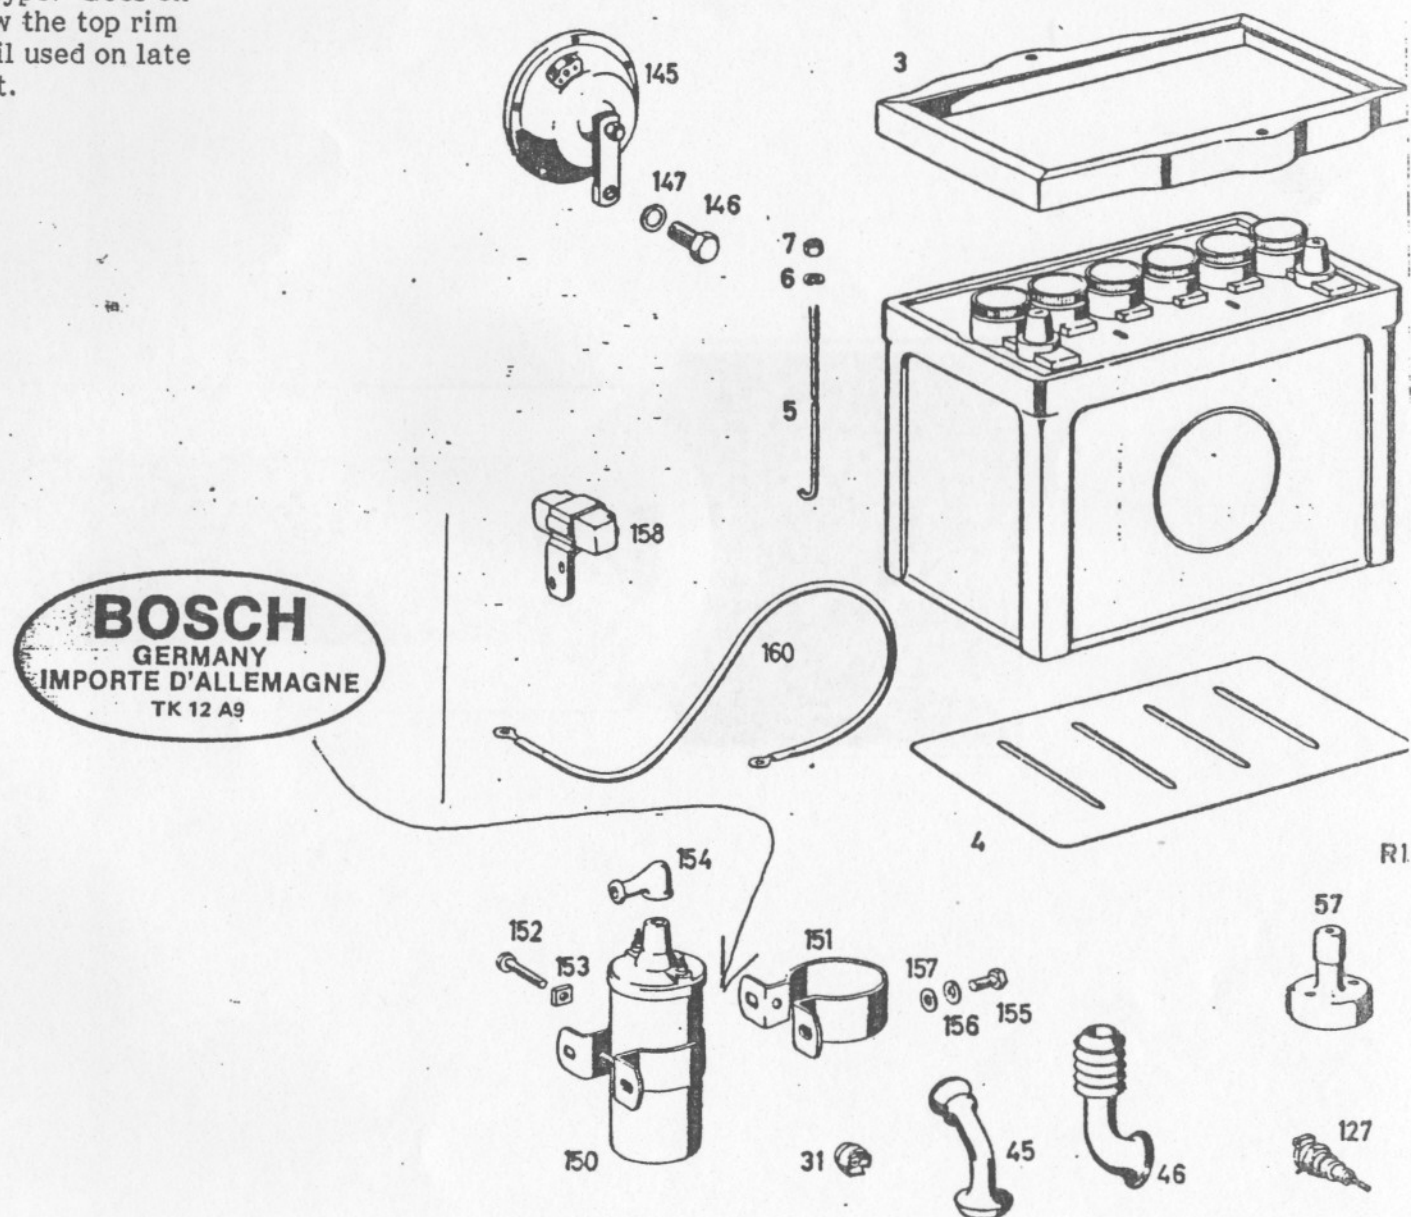

Tire pressure decal:
Purple metal foil decal is self-sticking. It goes inside trunk lid on underside of lid so that when you open the trunk you are looking at the decal. Often placed next to OIL decal.

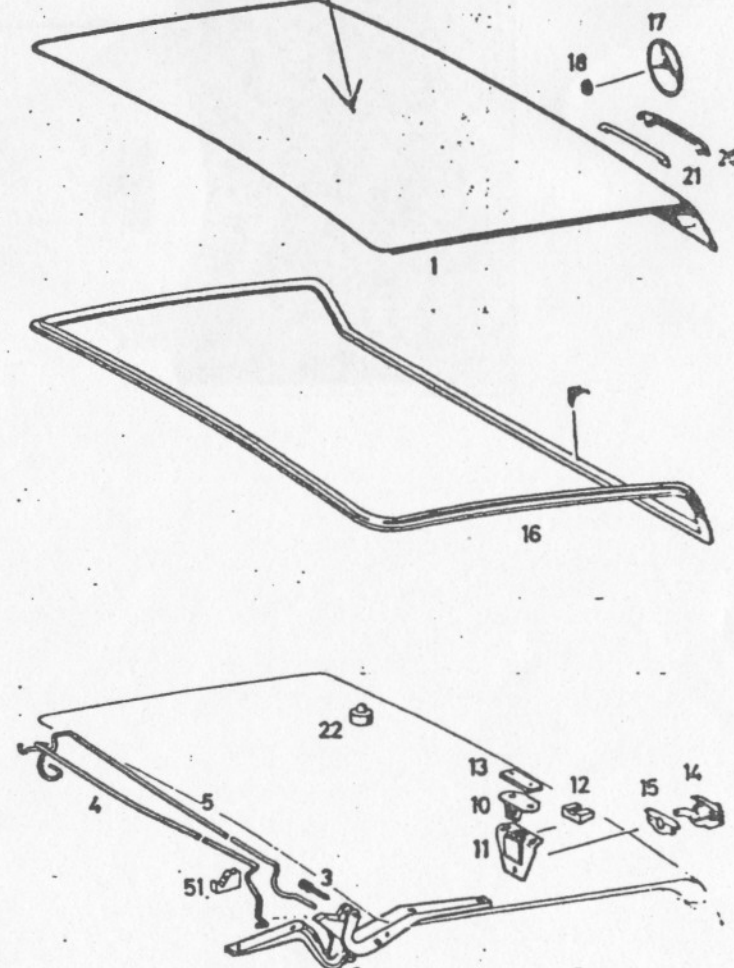

Cooling system decals.
230SL has yellow water transfer type
250SL, 280SL has white self-sticking type

Placement:
on pancake style overflow tank for 230SL and for brass
barrel type there are indents stamped into the metal.
For plastic barrel placement was anywhere with the end
result the decals did not fit very well or look very
professional, but that is what the factory did.


Attention!
High pressure cooling
system


Open only below 194°F (90°C)
Leave off high pressure at
notch No.1. To close turn to
stop (notch No.2).

DB - Teil Nr. 000 584 1840

Important!
Use cover with
No. "100" only.


DB - Teil Nr. 000 584 1340

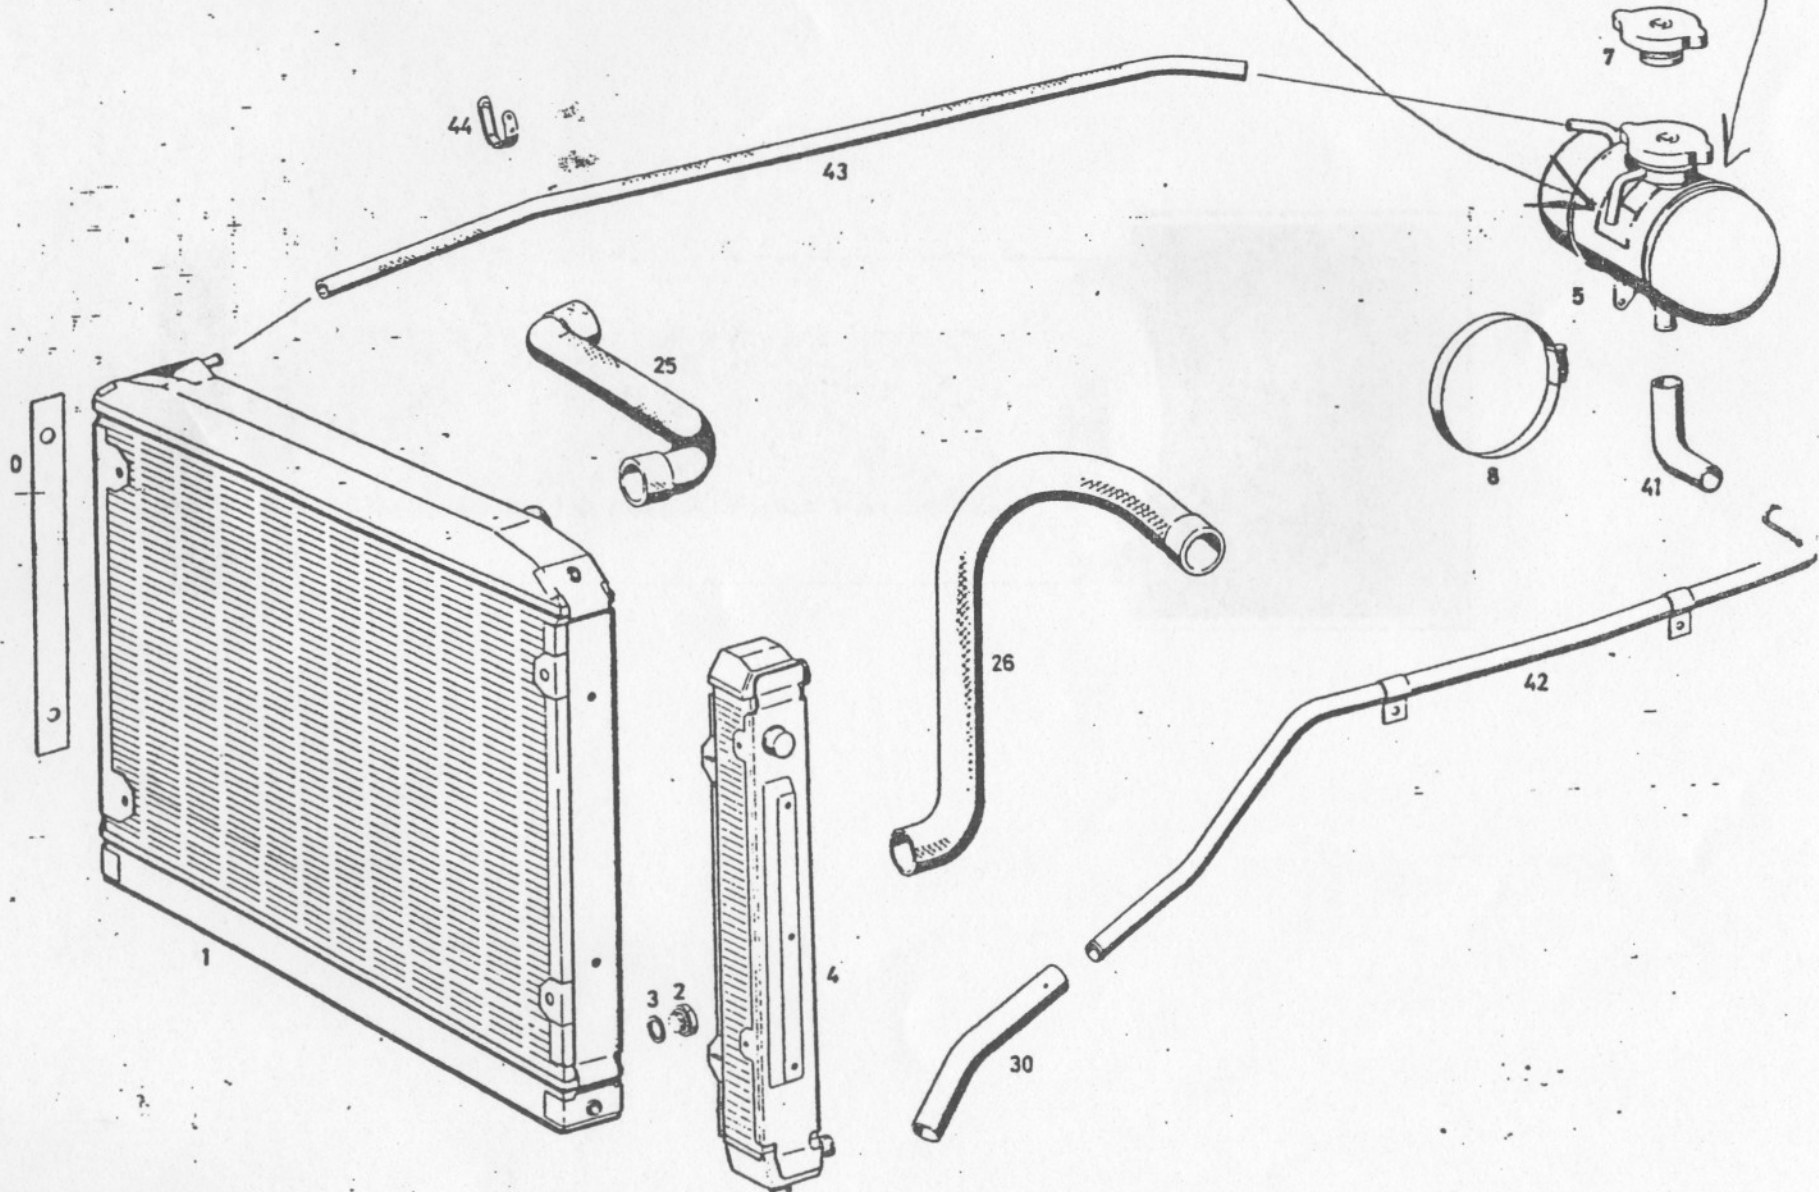

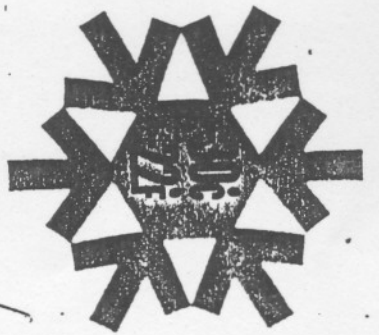


Mercedes-Benz

Anti-Freeze - inside car, on passenger
side of windshield, facing out.
So it can be seen while you fill the
over-flow tank.

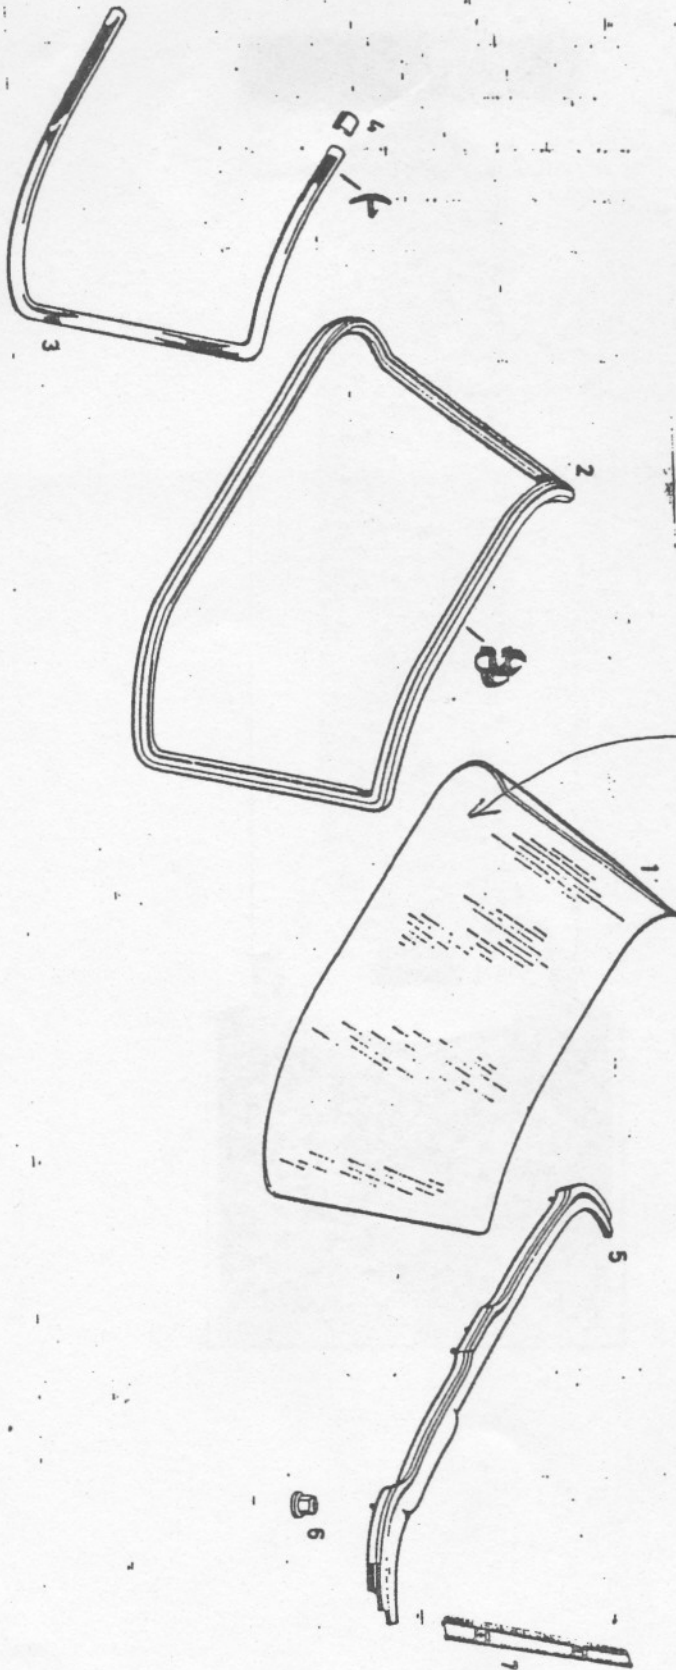

Red Roll Self Sticking Wax - 50 lbs. quantity
 First line starts "BEIM BELADEN..."

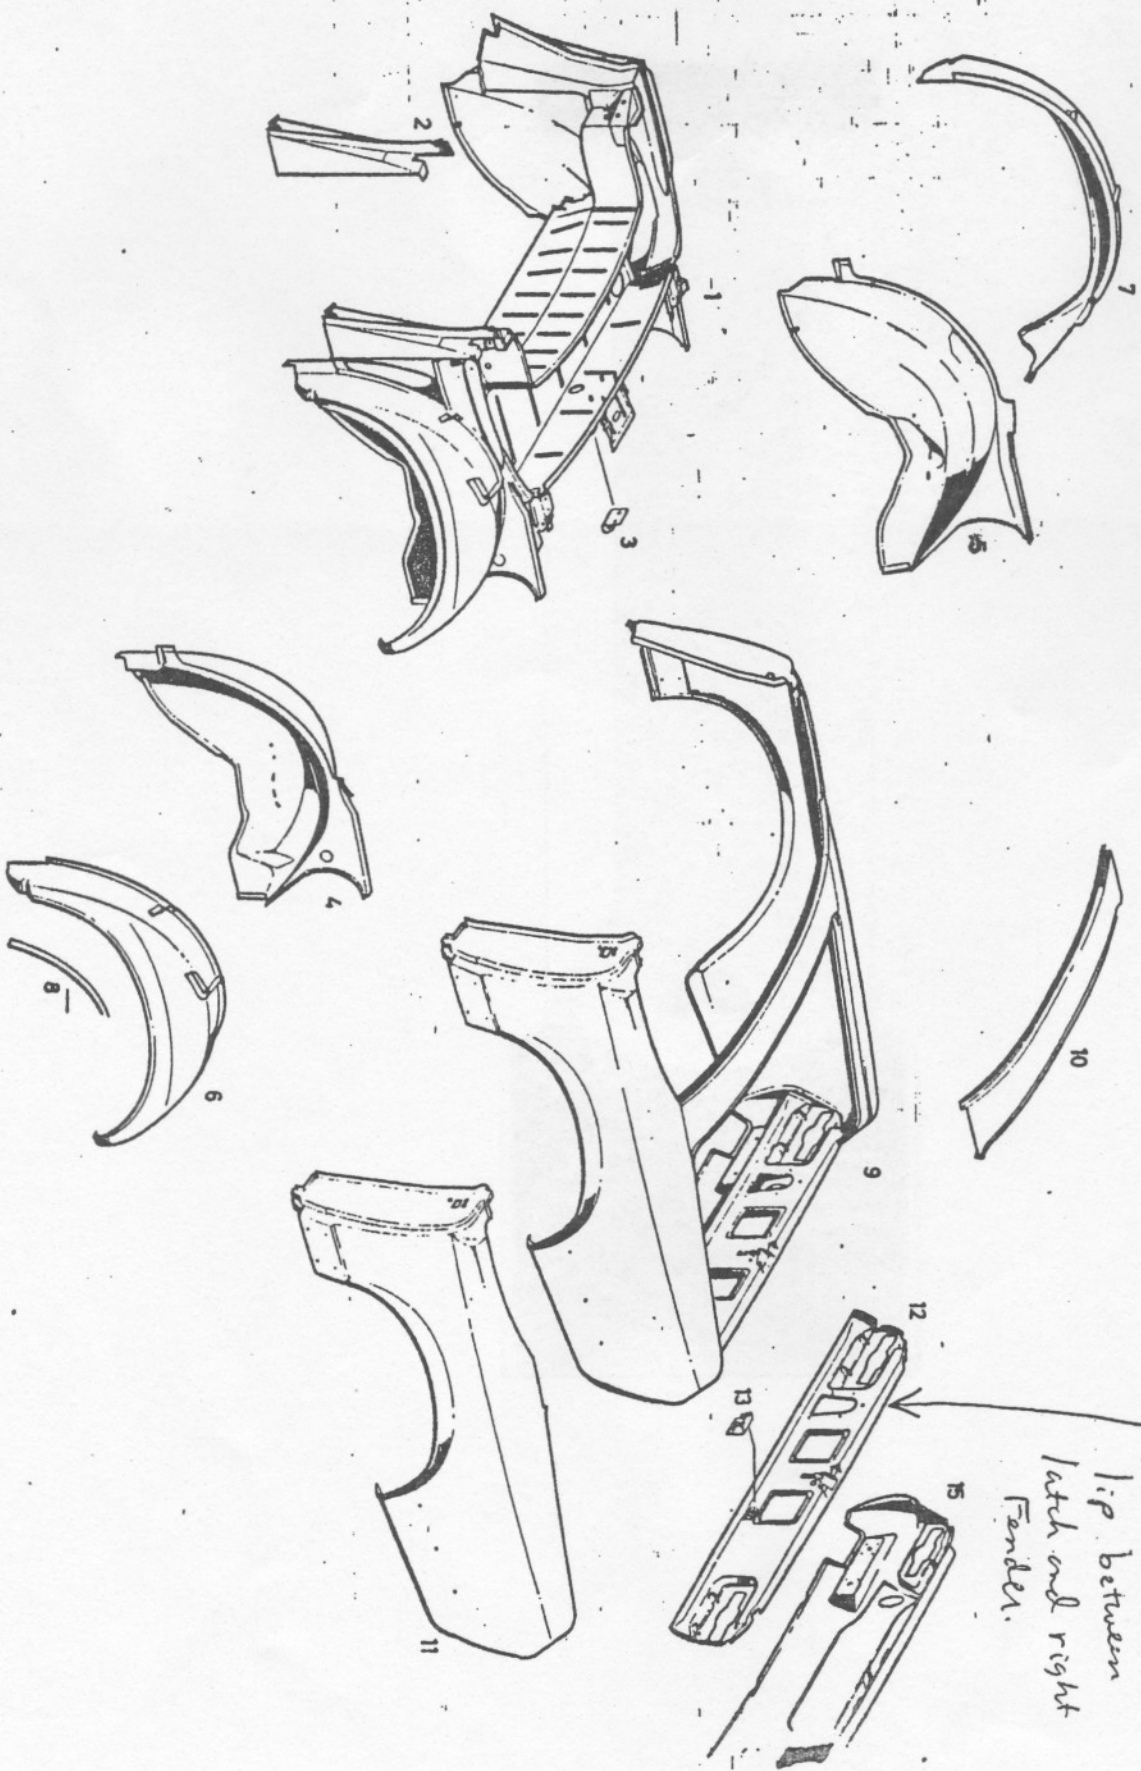

On Trunk
 lip between
 latch and right
 Fender.

Nach Gebrauch auf
Endstellung zurückdrehen
MADE IN GERMANY

